



## QSDT8DP Converting Files to AVI

**STEP 1:** Click on “File” in the SuperPlayer and select “to AVI”.

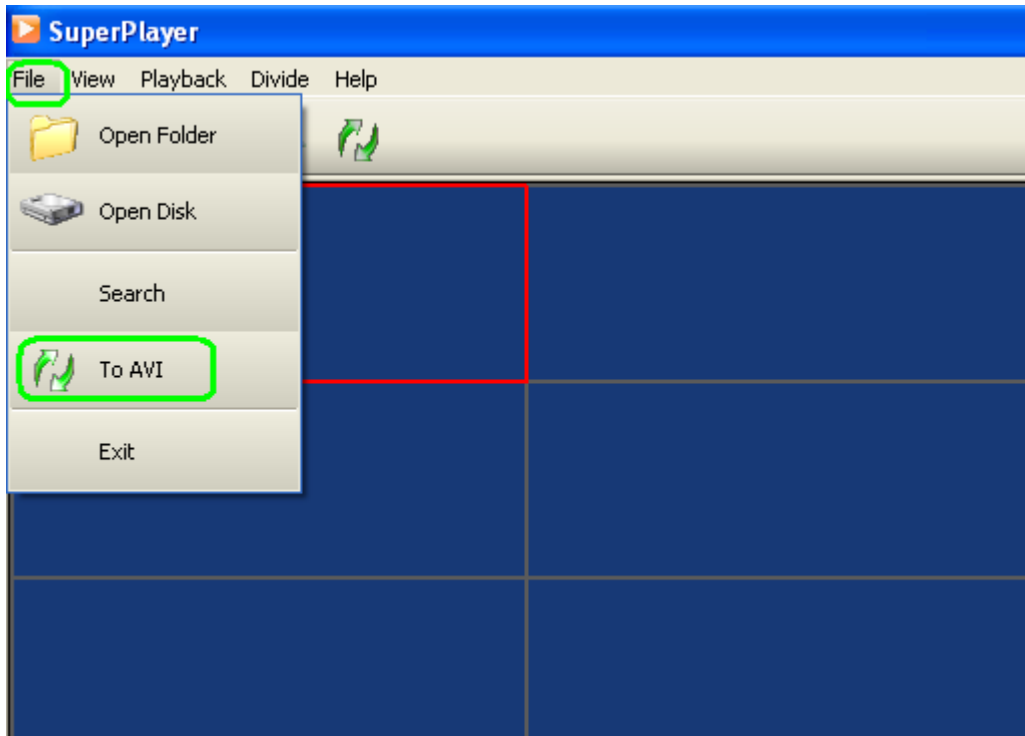


**STEP 2:** Check the box next to the files you wish to convert to AVI.

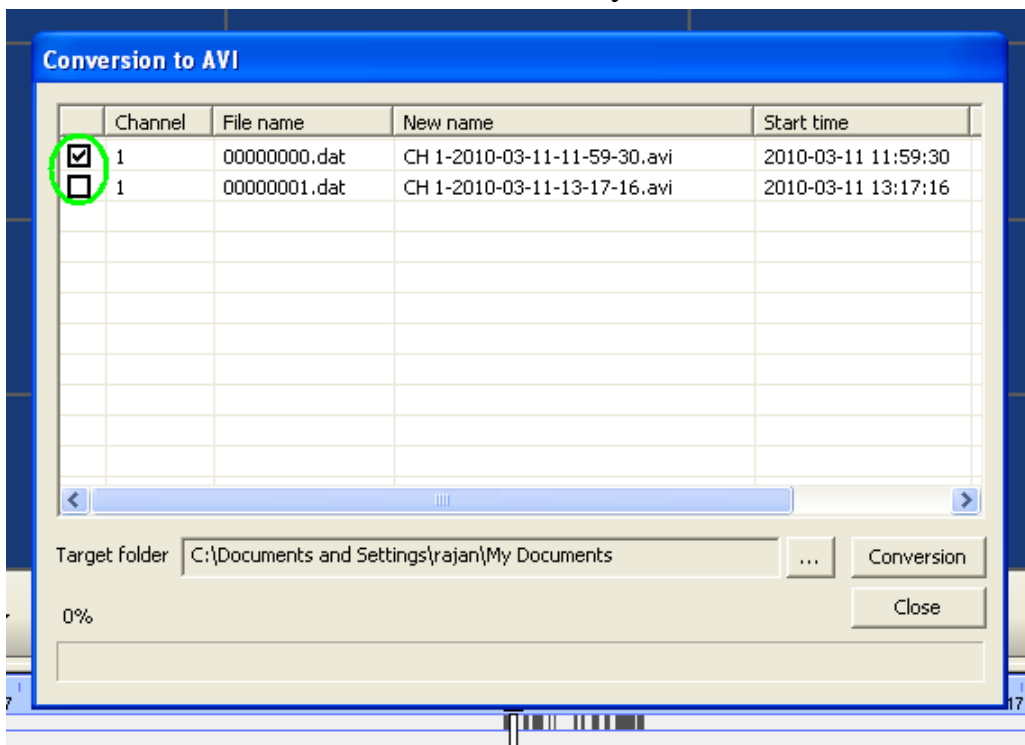


## QSDT8DP Converting Files to AVI

**STEP 3:** Click on the “...” button to select a folder where the converted files can be located. Once you have selected the file, click “OK”

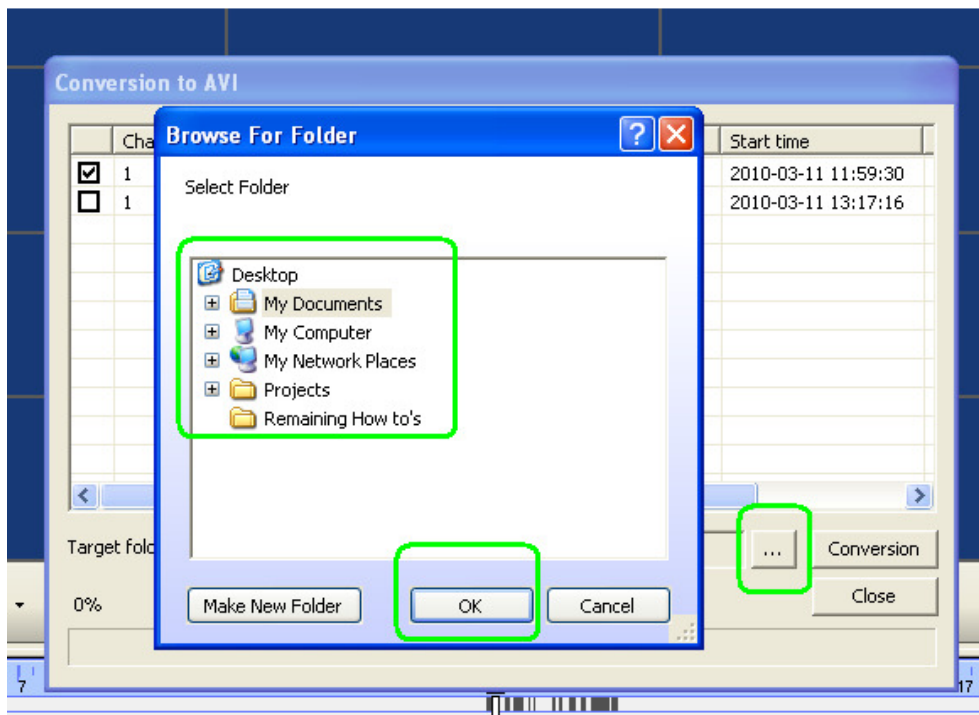


**STEP 4:** Click on “Conversion”

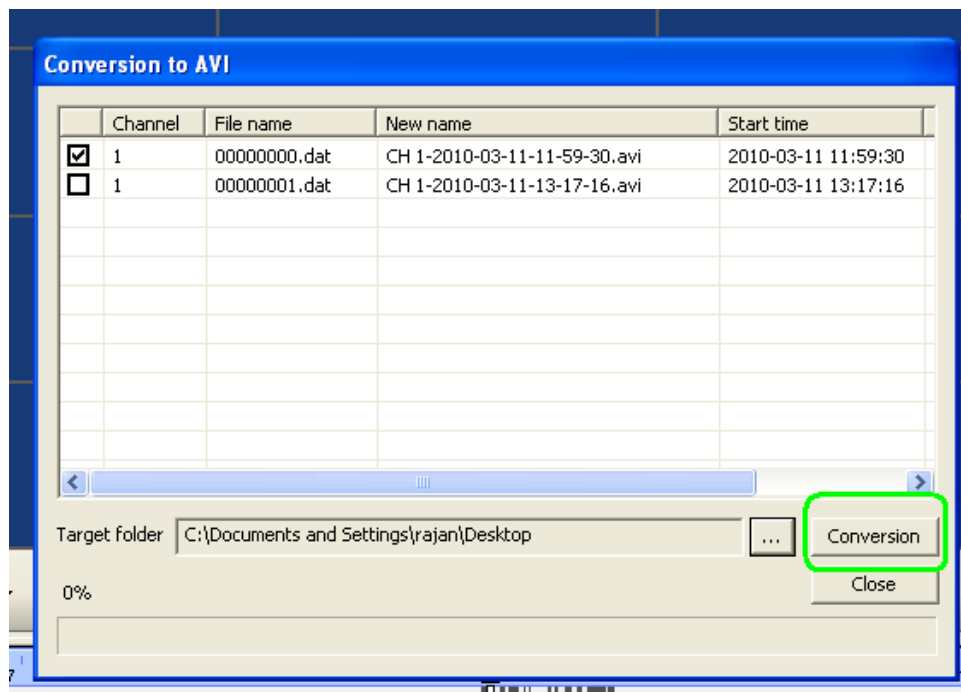

## QSDT8DP Converting Files to AVI

**STEP 5:** Once the file is done converting to AVI, press the close button.

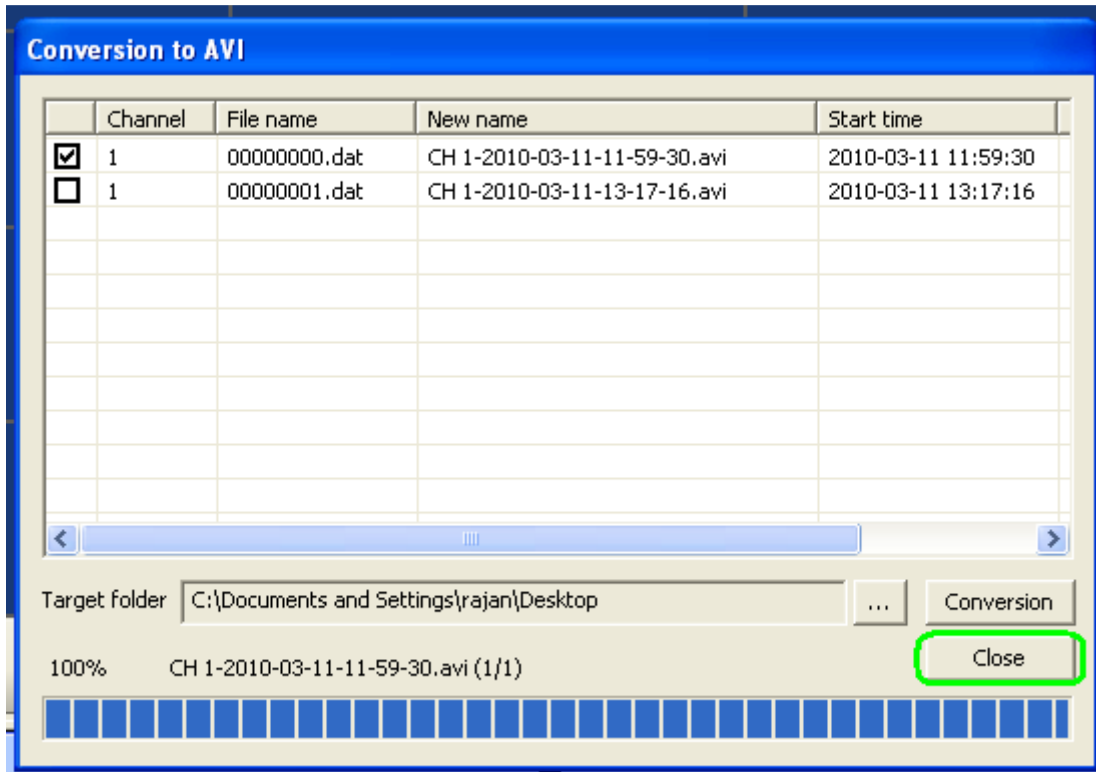

**STEP 6:** The file that you converted can now be played through a media player that supports AVI. If you are having issues viewing the AVI files, you may need to download the proper codecs; see the K Lite Codec Pack Install.

